


For camera and illumination

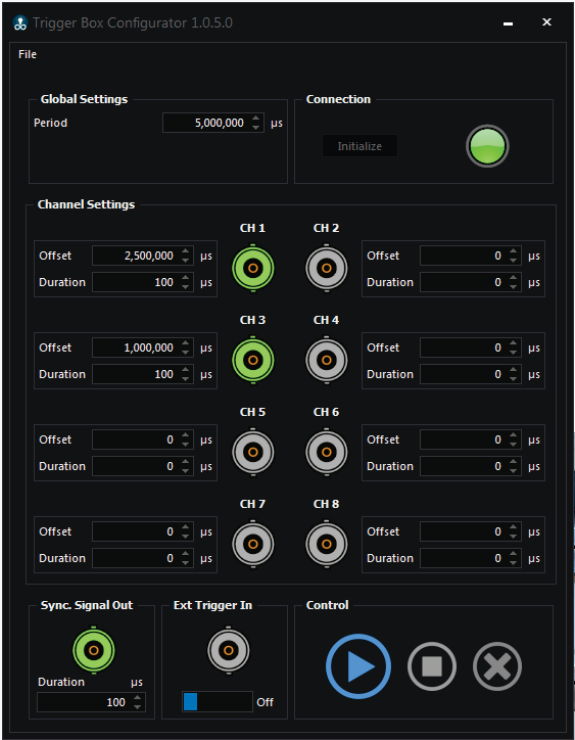

Channels	8 channels, one additional sync output, one trigger input, BNC female type
Dimension	173 mm (length), 126 mm (width), 48 mm (height)
Software functions	Init: init trigger box, kill: reset to default, configure: send all values to trigger box, stop: stop trigger process, start w/Int: start trigger with internal counter, start w/Ext: start trigger with external trigger
Voltages	Individual for each channel: 3.3V, 5V, 12V, 15V, 24V Note: maximum two channels can be operated with 24V simultaneously
Timebase	1us, per time periode one pulse can be configured by delay and length Additional trigger input (3.3V up to 24V): sync signal to start each period
Status LED	RDY: trigger box is ready and booted ACT: signal output EXT: external trigger is active
System requirements	USB 2.0, Windows 7